

arizona500

MENU TREE OIN#301200976 Rev. C
FW Version 2.2

MENU

The **MENU** button steps through the available submenus in the menu tree without selecting them. Starred items indicate current settings. When you locate the required submenu, press the **ACCEPT** button.



The - and + buttons enable you to change your menu selection or increase or decrease numerical values for that menu.

ACCEPT

The **ACCEPT** button enables you to confirm or enter your selection for that menu.

LOAD MEDIA

The **LOAD MEDIA** button enables you to load new media or reattach media to the take-up. This button also enables you to navigate backwards through the menu tree when in any submenu. The Writing Gap option is selectable only during Load Media.



ADVANCE MEDIA

The **ADVANCE MEDIA** button enables you to move supply media in conjunction with the - and + buttons.

ONLINE

The **ONLINE** button enables you to enter or exit the submenus and return the printer Online. This button indicates four status conditions:
- Solid, ready to receive a print job
- Fast blink, receiving a print job
- Slow blink, printing
- Off, offline

CANCEL

The **CANCEL** button enables you to exit lower menus and return to the top-level menu. This button is also used to cancel a print.

ERROR

Error - Indicates a printer problem has occurred.


MEDIA LOW

Media Low - Indicates the media supply is less than 50 feet.

INK LOW

Ink Low - Indicates an ink bottle or cleaning solution is close to empty.

ADVANCE MEDIA MENU

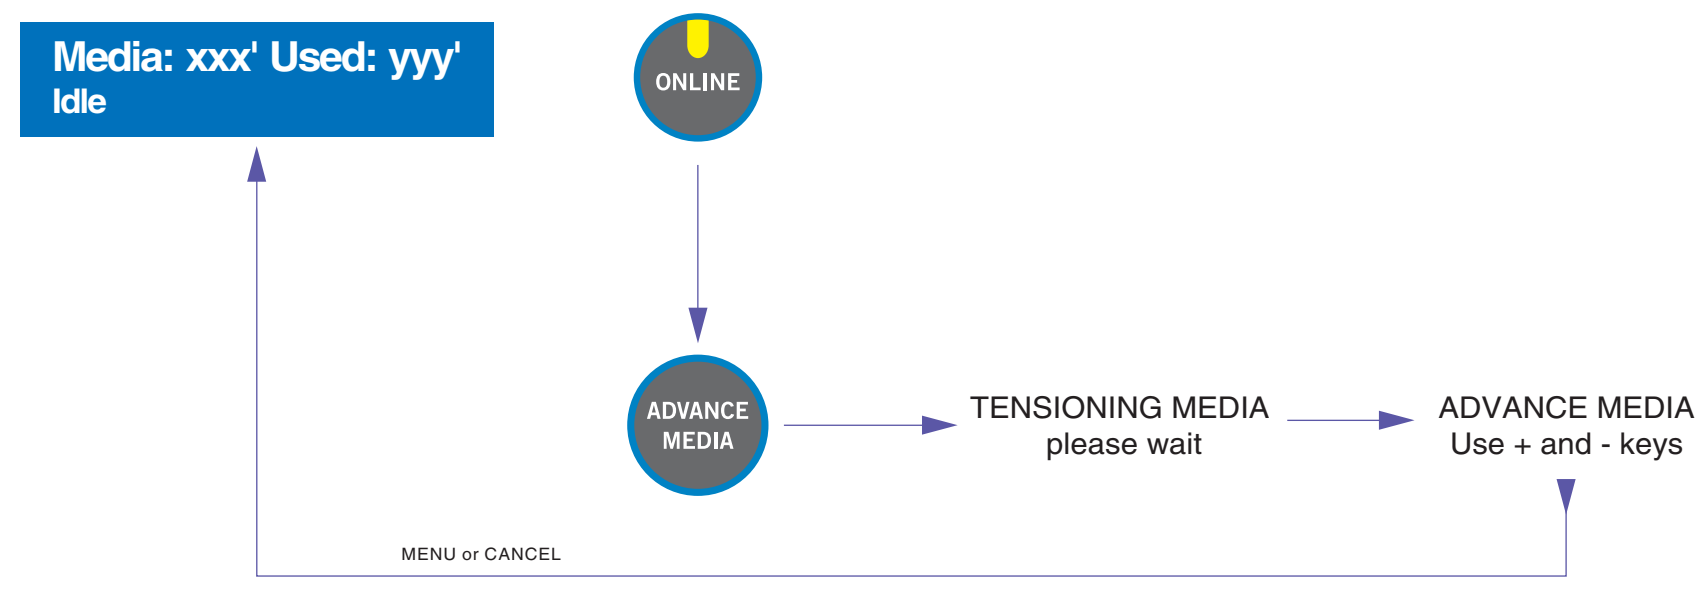

Pressing **CANCEL** after using the + / - buttons during the **ADVANCE MEDIA** option enables you to keep the present media position on the vacuum platen.

IDLE MENU FEATURES

